

Capsule coffee machine
Instruction manual

TRENTO



Please read the instructions and safety regulations
carefully before using the coffee machine.


aequinox
COFFEE SYSTEMS

⚠ Intended use:

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

It is prohibited to make any technical changes to the machine.

Do not use the machine for unauthorized purposes since this would create serious hazards!

The machine may not be used by children under 8 years of age or persons with physical, sensory or mental impairment, or lacking the necessary experience, unless supervised or after being instructed in the safe use of the machine and understanding the potential dangers.

Do not let children play with the machine. Keep the machine and its mains lead out of the reach of children under 8 years of age.

The necessary cleaning and maintenance must not be carried out by children if not under direct supervision.

⚠ Installation site:

Place the coffee machine in a safe place, where nobody may overturn it or be injured by it.

Do not keep the machine at a temperature below 4°C (39,2°F) as freezing may damage it. Do not use the coffee machine outdoors.

Do not place the machine on very hot surfaces or close to flames.

⚠ Power supply:

Connect the coffee machine to a suitable mains socket. The voltage must match the one on the appliance identification plate.

⚠ Power supply cable:

Do not operate the coffee machine if the power cord is damaged. Should the power cord be damaged, have it replaced by the manufacturer or the relevant service centre, in order to prevent any risk. The power cord should not be placed on corners, on sharp edges or hot objects. Do not carry or pull the coffee machine holding it by the power cord. Do not remove the plug by pulling the power cord, do not touch it with wet hands. Power cord should not hang loose from tables or shelves.

⚠ Danger of electrocution:

Live parts should never come into touch with water. Do not immerse the machine in water.

⚠ Protect children under 8 years of age:

Prevent children from playing with the machine. Children are not aware of the risks related to electric household appliances. Do not leave the machine-packaging materials within the reach of children.

⚠ Danger of burns:

Do not touch the hot parts (cartridge holder group) of the machine immediately after use. While dispensing the drink, pay attention to any possible splashes of hot liquid.

⚠ Cleaning:

Before cleaning, unplug the machine and let it cool down. Do not immerse the machine in water! It is strictly forbidden to tamper with the internal parts of the machine. Change the water in the tank if not used for 3 days. To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.

⚠ Storing the machine:

If the machine remains inactive for a long time, unplug it and store it in a dry place out of reach of children. Keep it protected from dust and dirt.



✖ Servicing / Maintenance:

In case of failure, problems or a suspected fault resulting from falling of the machine, immediately unplug the machine. Do not attempt to operate a faulty machine. Servicing and repairs can only be performed by Authorized Service Centres. All liability for damages resulting from work not carried out by professionals is declined.

✖ Water tank:

Fill the tank only with fresh, non-sparkling, drinking water. Do not operate the machine if the water is not at least above the minimum level indicated on the tank.

✖ Capsule compartment:

This machine can only be used with compatible capsules; do not put your fingers or any other object in the capsule compartment. The capsules can be used only once.


✖ Machine disposal at the end of its operational life:


INFORMATION FOR THE USER: the symbol of the crossed-out wheeled bin on the appliance or its packaging indicates that the product must be disposed of separately from other waste at the end of its operational life.

The user must therefore take the appliance to be disposed of to an appropriate separate collection centre for electrical and electronic equipment.

Appropriate separate collection for the dismantled appliance being subsequently sent out for recycling, treatment and for environmentally friendly disposal, contribute to the prevention of possible negative effects on the environment and on human health, and encourage recycling of the materials the appliance is made of.

Specific administrative sanctions provided for by current regulations will be applied for illicit disposal of the product by the user.

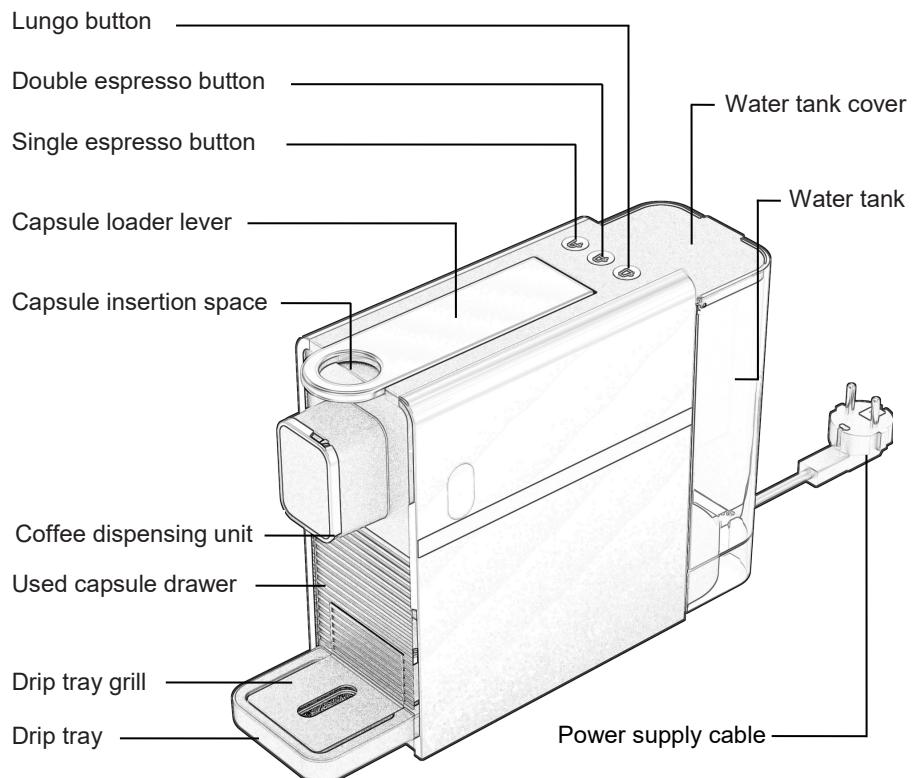

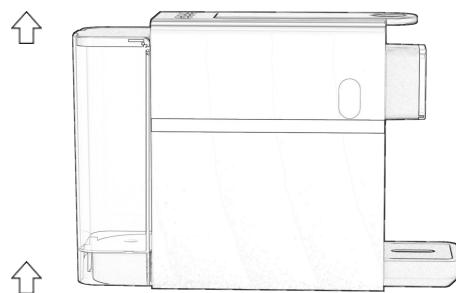

⚠ No liability is held for damage caused by:

- incorrect use not in accordance with the intended purposes;
- repairs not carried out by authorized service centres;
- tampering with the power supply cable;
- tampering with any parts of the machine;
- the use of non-original spare parts and accessories;
- failure to descale;
- storage at temperatures below 4°C (39,2°F);
- use in places with temperature below 10°C (50°F) or above 40°C (104°F);
- use in places with relative humidity above 95%;
- use of capsules others than indicated. In these cases, the warranty is not valid.

STARTING THE MACHINE


⚠ Place the coffee machine on a flat and stable surface, far from water and heat sources. Do not connect the machine to the mains supply. Machine damages due to non-observance of these indications are not covered by warranty.

1 Lift and remove the cover, then the water tank itself.


2 Rinse off the tank.

3 Fill the water tank up to the MAX level indicated, using only fresh drinking water. Fit the tank back into place, then close by using the cover.

⚠ Hot water and other liquids can damage the tank and the machine. Do not operate the machine without water: make sure that there is enough water in the tank.

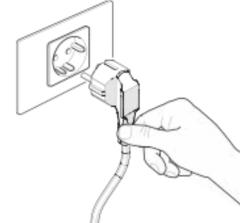

4 Fit the supply plug into the power outlet.

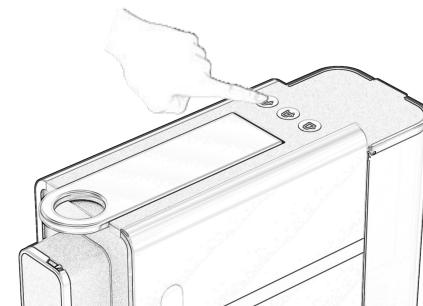

5 Press one of the supply buttons to switch the machine on.


6 The coffee machine starts the heating cycle. The supply buttons will start blinking to a light white.

7 The machine will be ready for use when the supply buttons light up to a steady white light.

8 At first power-on, supply at least 0.5 litres of water with out capsule placing a container under the coffee spout.



STAND-BY FUNCTION

i To ensure the energy conservation the machine automatically passes to the stand-by mode after 9 minutes of not being used. The machine can be set to the stand-by mode manually, first of the 9 minutes' time, by keeping Short espresso button and Short espresso button pressed down for at 1 seconds. This mode is indicated by the switching off of the buttons. The machine can be reactivated by pressing the buttons again.

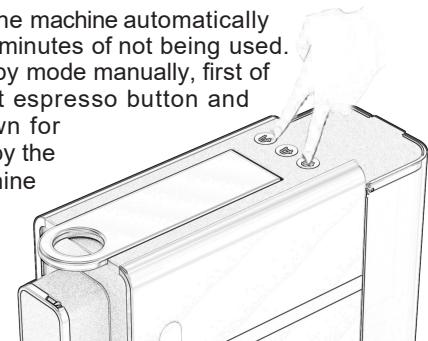

COFFEE DISPENSING

- i** Make sure that the supply buttons lights up to a steady white light.
- !** Never put fingers or objects in the pod-holder. Only compatible capsules must be introduced in the pod-holder.
- !** Single-dose capsules are prepared to dispense one coffee/product. DO NOT use the capsules more than once. Inserting two or more capsules can cause the machine to malfunction.
- i** To always have a coffee at the perfect temperature, it is recommended to preheat the cup with hot water. Position the cup under the dispensing spout without inserting the capsule. Press one of the supply buttons to supply hot water enough to pre-heat the cup.

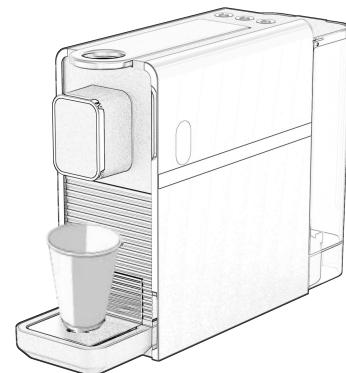
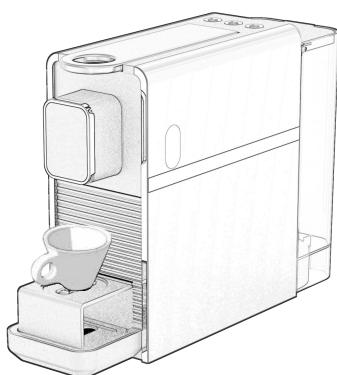


1 Place the cup under the coffee dispenser for a classic espresso



2 Remove the drip tray to use cups of different sizes for a long coffee.

- i** If power supply is interrupted during the coffee supply cycle, restore power supply and restart the coffee supply procedure.
- i** If during the supply cycle, water lacks in the tank, please press button to stop machine. then proceed as follows
 - Fill the water tank up to the MAX level indicated.
 - Press the power-on/supply button previously selected. The button will start flashing and the coffee supply procedure will restart.
- i** After about 7 supplies capsules, please empty the capsules drawer. Now the machine is ready for a new supply.

3 Lift the capsule loading lever until it locks into position to open the capsule fitting compartment.

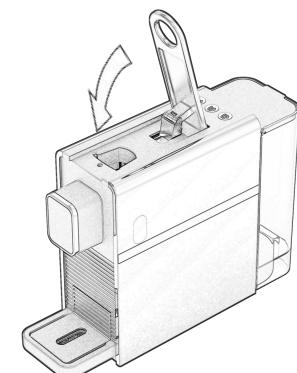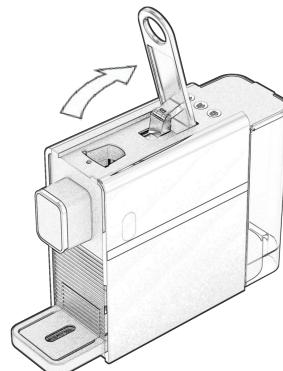

4 Put a capsule into the pod fitting compartment.

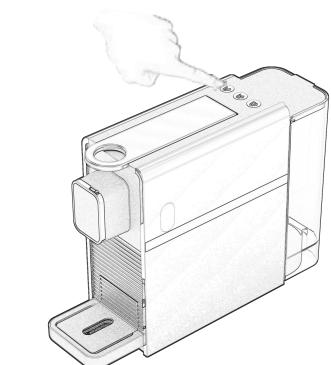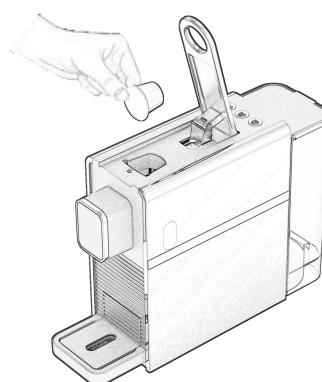

5 Lower the capsule loading lever to close the capsule fitting compartment.

i The supply button will light up to a blinking white light when the product is being supplied.

! To supply the product again, wait for the supply button to light up to a steady white light




COFFEE DOSE PROGRAMMING

i Measures are always programmed using the- same but ton; any other buttons are ignored. The programmed amount of brewed coffee can be changed by repeating the programming.


1 Lift the capsule loading lever until it locks into position to open the capsule fitting compartment.

2 Put a capsule into the capsule fitting compartment.

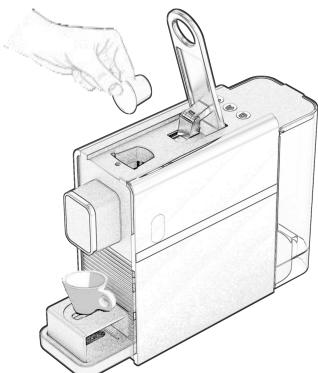

3 Lower the capsule loading lever to close the capsule fitting compartment.

4 Press and hold one of the two coffee delivery buttons than don't releasing the button. The selected key will flash and the coffee machine will enter the programming mode.

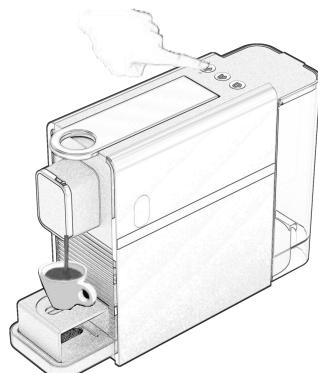

5 Once the desired amount of coffee has been obtained, then releasing the button to stop supply.

i Programming Scope:

Singolo espresso: 5 ~ 25 seconds

Double espresso: 25 ~ 35 seconds

Lungo: 35 ~ 60 seconds

i If the programmed measure exceeds the maximum the machine will automatically stop delivery, the last programmed measure will be saved in the memory. If there is a power failure during programming, the last programmed value don't remains in the memory.


! Never use solvents, alcohol or other aggressive substances or ovens for drying the coffee machine components. Wash machine components (electric components excluded) with cold/lukewarm water and non-abrasive clothes/sponges. All removable components can be cleaned by using a dishwasher. Do not leave water in the tank and water circuit for more than 3 days. If this is the case, drain the tank and circuit, rinse it and refill it with fresh water, then carry out a delivery without capsule before making any coffee or other beverage.

COFFEE DISPENSER CLEANING


To clean the dispenser, perform a weekly COFFEE BREWING procedure without inserting the capsule.

CLEANING THE CAPSULE COLLECTING DRAWER AND THE DROP COLLECTING

i The used capsule collecting drawer and the drop collecting drawer should be emptied and cleaned after making coffee 4/5 times or every two/three days .

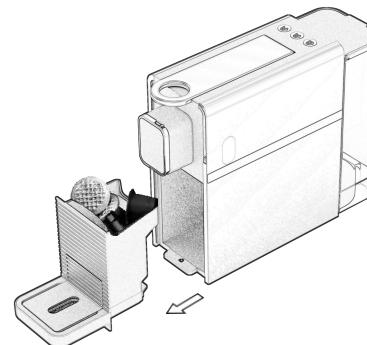

1 Take off the drip tray and remove the drip tray grill.

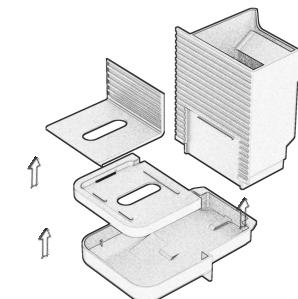

2 Remove and empty the used capsule collecting drawer.Clean and dry all parts before putting them back.

i Regularly verify that the used capsule collecting drawer and the drop collecting drawer will not be full, to avoid machine malfunctions and damage.



DESCALING



Limescale normally builds up with extended use of the appliance; the machine needs descaling every 3-4 months and/or whenever a reduction in water flow is noticed.



i In the event of any operational conflict, this use and maintenance manual shall prevail on any indication specified on accessories and/or components sold separately.

i For descaling can be used a descaling product for coffee machines of non-toxic and/or harmful type, commercially available.

! Do not drink the descaling solution and products- dis pensed until the completion of the cycle. Never use vinegar as a descaling solution.

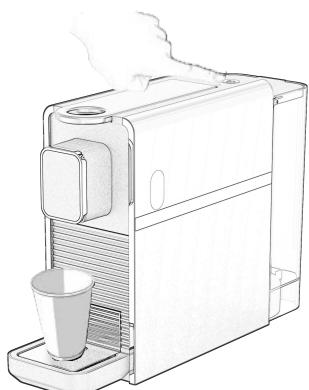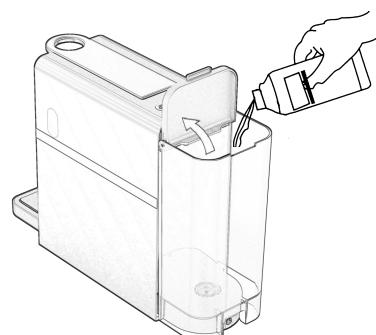

- 1** Remove and empty the water tank
- 2** Refill the tank with a descaling solution and water as specified on the package of the descaling product. Refit the tank.
- 3** Power the machine ON and place a suitable container under the spout.
- 4** Press one of the supply buttons, and then supply two cups (approximately 150 ml each) of water.
- 5** Allow the descaling solution to work for about 15-20 minute.
- 6** Switch-on the machine pressing one of the supply buttons, then proceed as described in steps and.
- 7** Repeat the steps described in point until the water tank is completely empty.
- 8** Remove the tank and rinse it with fresh drinking water. Fill it completely.
- 9** Place a suitable container under the dispenser. Press one of the supply buttons, then supply the full content of the tank.
- 10** When the water is finished, refill the tank and repeat the steps described in point. When finished, the 05 end of the descaling cycle is completed.

Nominal Voltage - Power Rating - Power Supply: See label on the appliance

Measurements: 320 x 95 x 224mm

Weight: approx. 2.2 kg

Water tank: 0.75 L - Removable type

Cable Length: 0,8 m (31.49 in)

Correct Disposal of this product



This marking indicates that this product should not be disposed with other Household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling



